

# Accessories





## Clip for hanging Suspend

Size :50\*54.5\*45mm Thickness : 0.6mm spring steel



## Clip for surface mounting Surface Mounting

Size :53.5\*30.0\*25.2mm Thickness : 0.6mm spring steel

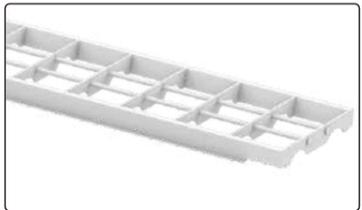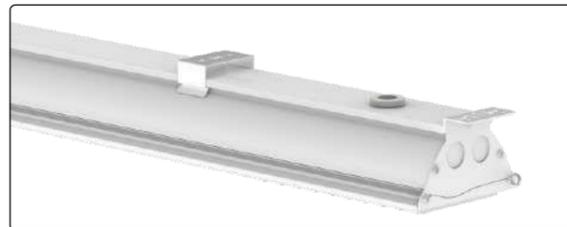

## Metal Grille

Ball proof & Anti-glare (UGR<19)



## Sensor Base

Reserved in lamp



## Sensor ( microwave / PIR)

Plug-play into sensor base




# User manual---Industrial LED Linear Light



## Parameter

3000K 4000K 5000K 6500K

Model Number	Wattage(adjustable )	Dimension	Lumen	Dimming
GF12-50YZE	30/36/45/50W	1205mm	160lm/w	Non-Dim(OSRAM)
GF15-75YZE	50/58/65/75W	1460mm	160lm/w	Non-Dim(OSRAM)
GF15-150YZE	100/120/130/150W	1460mm	160lm/w	Non-Dim(OSRAM)
GF15-75YZE	25/35/40/50/65/75W	1460mm	160lm/w	1-10V (LIFUD)
GF15-150YZE	50/70/80/100/130/150W	1460mm	160lm/w	1-10V (LIFUD)
GF12-50YZE	22-50W	1205mm	160lm/w	DALI (BOKE)
GF15-80YZE	48-78W	1460mm	160lm/w	DALI (BOKE)
GF15-150YZE	48-150W programmable	1460mm	160lm/w	DALI (PHILIPS)

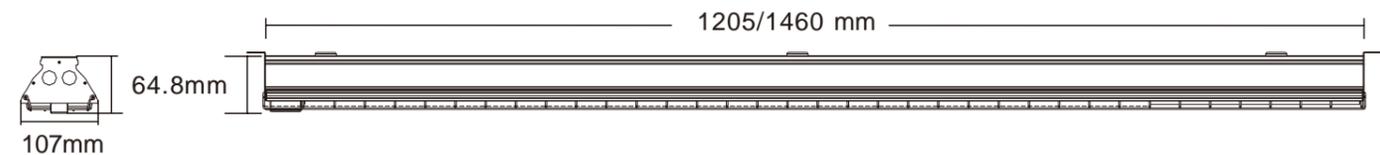


## Warning :

- 1.Before opening the package, please check whether the product is in unopened ; If you find that the LED luminaire is damaged due to objective factors or in the process of transportation after opening the package, please take a photo first and feedback this information to retailer or factory .
- 2.LED luminaire must be installed by professional electrician according to the electrical circuit diagram offered
- 3.Please check whether the local voltage range is in the working voltage range of the LED luminaire
- 4.As a long time not to use the LED luminaire, please keep it in a cool,dry,clean environment, but not keep it in a damp or high temperature environment.
5. Do not fall the luminaire down or replace the internal electronic components by yourselves.


# Installation—Suspend

**1**

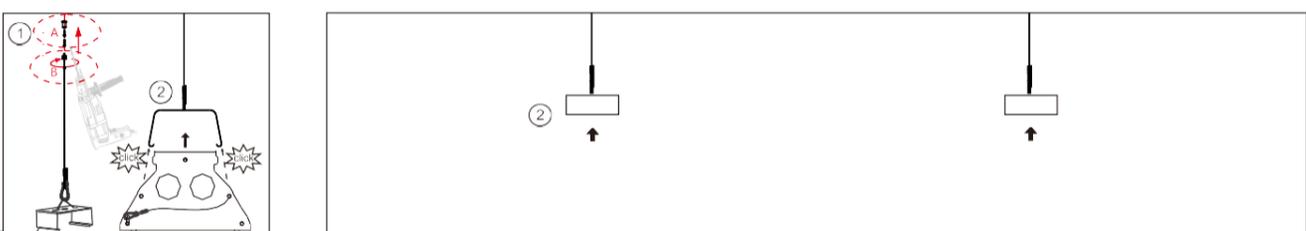


Step1: Hang up the clips to the suspend cables. Step2: Put each fixtures in the clips.

**2**

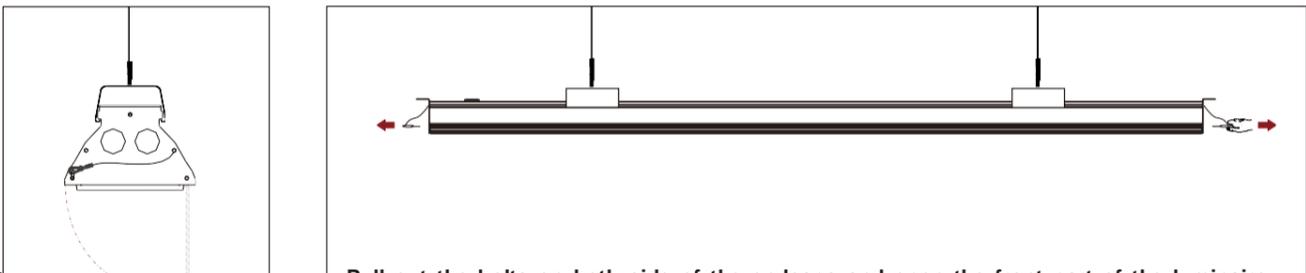


Pull out the bolts on both side of the endcaps and open the front part of the luminaire

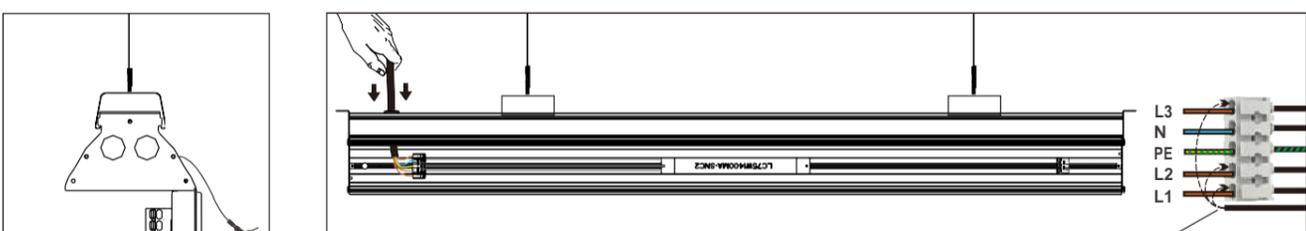

Leading the AC power in and select the phase L1, L2 or L3 .


Phase select L1,L2,L3

**4**

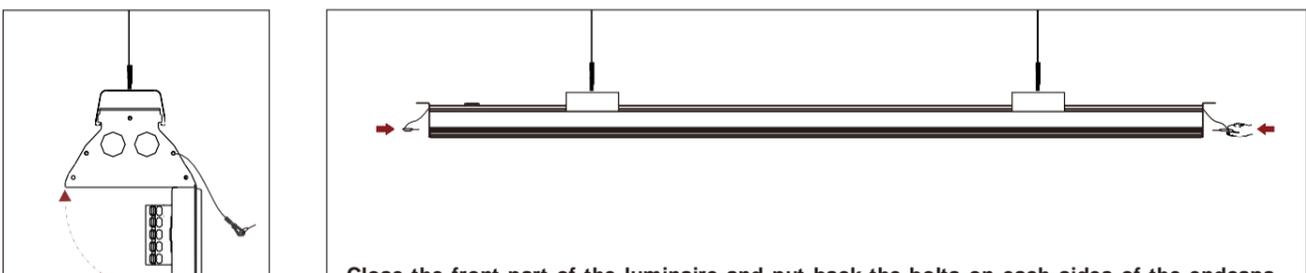

Close the front part of the luminaire and put back the bolts on each sides of the endcaps

**5**

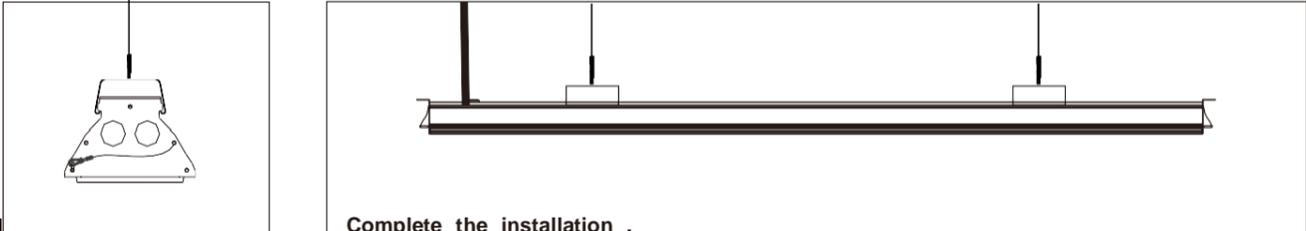

Complete the installation .

# Emergency



● Text   ● Main power   ● Charging   ● Malfunction

# Plug-play Sensor



- Type 1: PIR sensor + Daylight threshold
- Type 2: Microwave + daylight threshold
- Type 3: Microwave + daylight Harvesting
- Type 4: Microwave + Bluetooth control


# How to install grille




1、 loose 4 screws from the outer endcap



3、 loose 1 screw from the inner endcap

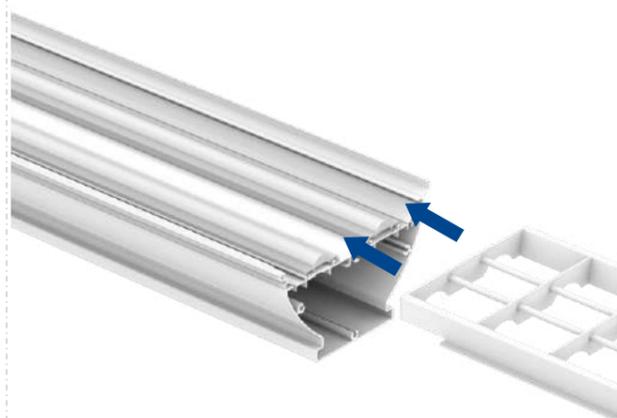

4、 Slide the grille into aluminum profile

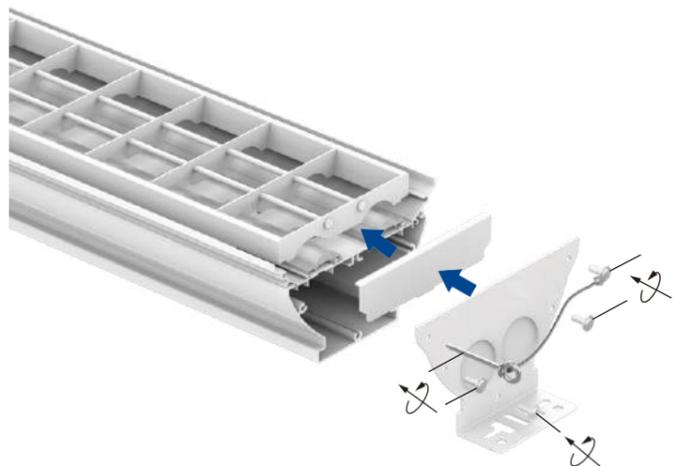

5、 Close endcaps with screws

